




**Power  
Generation**

**Onan**

## **Post-Sale Literature Index**

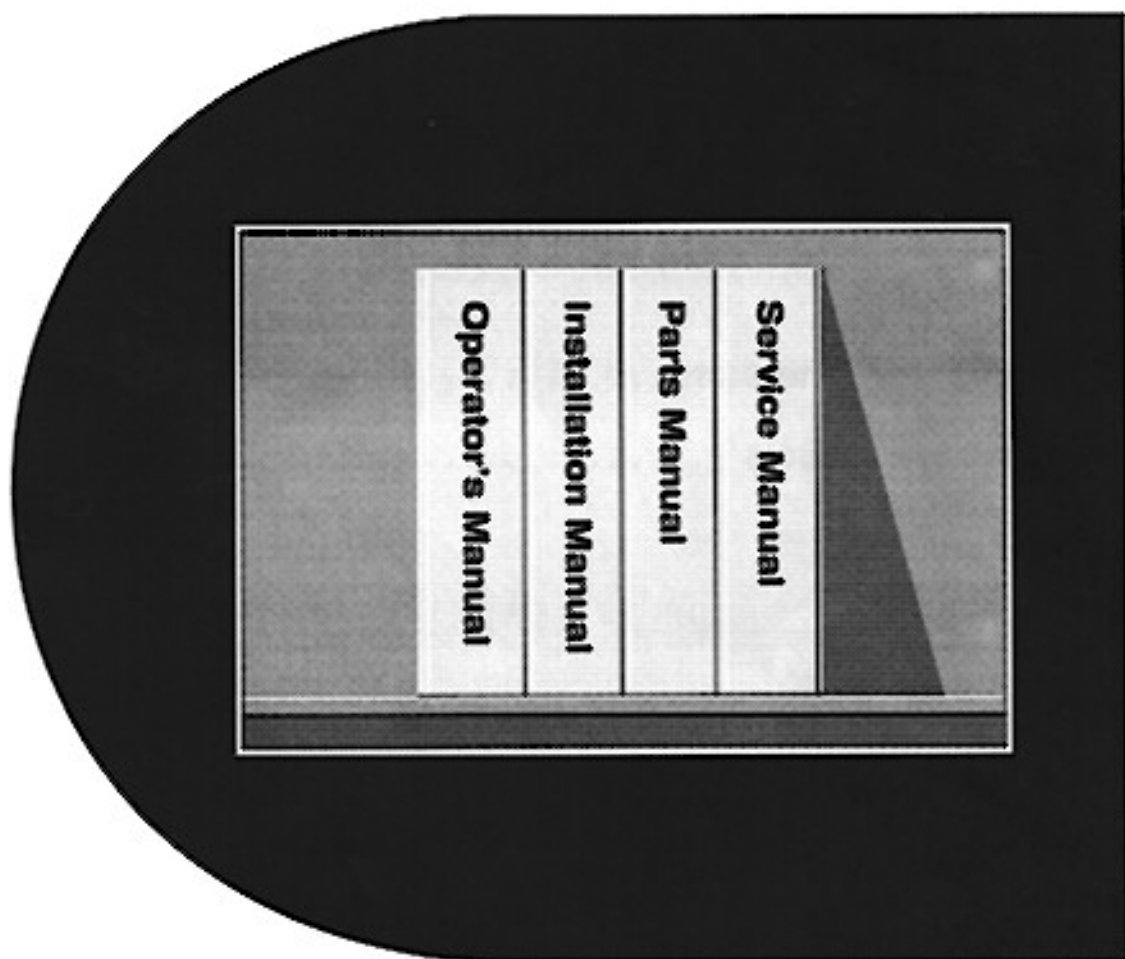

## Engines

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual
<b>B</b>				
B43E	A-D	965-0156	965-0252	965-0757
B43E Lincoln	B-D	965-0156	965-0259	965-0757
B43G	B-G	965-0156	965-0258	965-0757
B43M	A-C	965-0155	965-0254	965-0754
B48G	B-G	965-0156	965-0256	965-0757
B48M	A	965-0155	965-0255	965-0754
B48M Miller	A	965-0161	965-0261	965-0161
BF Tractor	A-F	—	965-0250	965-0250
BG Tractor	A	—	965-0251	965-0251
<b>C</b>				
CCK	A-J	927-0153	927-0253	927-0754
CCK Lincoln	F-G	927-0153	927-2501	927-0754
CCK Miller	G-J	927-1120	927-1120	927-1120
CCKA	A-J	927-0153	927-0253	927-0754
CCKA Lincoln	G-J	927-0153	927-2501	927-0754
CCKA Miller	G-J	927-1120	927-1120	927-1120
CCKA Tractor	A-G	927-0153	927-0250	927-0754
CCKB	G-J	927-0151	927-0404	927-0754
CCKB Tractor	H-J	927-0151	927-0251	927-0754
<b>D</b>				
DJA	A-T	967-0755	—	967-0755
DJB	A-V	967-0150	967-0251	967-0751
DJBA	P-W	967-0156	—	967-0751
DJC	A-V	967-0150	967-0252	967-0751
<b>E</b>				
E124V (Gasoline)	E	965-0171	970-0200B	965-0764
E124V (LP)	E-F	965-0174B	965-0200B	965-0764
E125H	C-D	965-0179	965-0202B	965-0758
E125V (Gasoline)	A-B	965-0165	970-0200B	965-0764
E125V (Gasoline)	C-D	965-0166	970-0200B	965-0764
E125V (Gasoline)	E	965-0178	970-0200B	965-0764
E125V (LP)	B-D	965-0153	965-0200B	965-0764
E125V (LP)	E-F	965-0178	965-0200B	965-0764
E140H	C-D	965-0179	965-0202B	965-0758
E140H (Cub Cadet)	A-C	NA	965-0201	NA
E140V (Gasoline)	A-B	965-0165	970-0200B	965-0764
E140V (Gasoline)	C-D	965-0166	970-0200B	965-0764

## Engines

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual
<b>E (Continued)</b>				
E140V (Gasoline)	E	965-0178	970-0200B	965-0764
E140V (LP)	B-D	965-0153	965-0200B	965-0764
E140V (LP)	E-F	965-0178	965-0200B	965-0764
<b>J</b>				
JB	A-T	967-0754	967-0254	967-0754
JC	A-V	967-0754	967-0254	967-0754
<b>L</b>				
LX720/770/790	H	—	965-0268B	—
LX990	H	—	965-0266C	—
LXV770/790	H	—	965-0265B	—
<b>N</b>				
N52M	A-B	940-0152	940-0252	940-0752
NB	A	—	940-0401	940-0401
NB Tractor	A	—	940-1001	940-1001
NH	A-D	—	940-0253	940-0751
NHA	A-D	940-0153	940-0403	940-0753
NHAV	A-D	940-0153	940-0403	940-0753
NHB	A-D	940-0153	940-0403	940-0753
NHBV	A-D	940-0153	940-0403	940-0753
NHC	A-E	940-0151	940-0251	940-0751
NHCV	A-E	940-0151	940-0251	940-0751
NHP	C	—	940-0254	940-0750
NHPV	C	—	940-0254	940-0750
<b>O</b>				
OHV220	A	—	963-0200A	963-0500B
OL13	D	—	965-0202B	—
OL16/18/20	H	—	965-0268B	—
OL24	H	—	965-0266C	—
OLV13	E	—	970-0200B	—
OLV13	F	—	965-0200B	—
OLV18	H	—	965-0265B	—
OLV20	H	—	965-0265B	—
<b>P</b>				
P216G	A-F	965-0162	965-0268B	965-0762
P216G	G-H	965-0182B	965-0268B	965-0762
P216G Lincoln	B-F	965-0162	965-0268B	965-0762
P216G Lincoln	G-H	965-0167	965-0268B	965-0762

## Engines

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual
<b>P (Continued)</b>				
P216G Miller	B-D	965-0163	965-0268B	965-0163
P216G Miller	E-H	965-0163	965-0268B	965-0163
P216V	A-F	965-0164	965-0265B	965-0763
P216V	G-H	965-0180	965-0265B	965-0763
P218G	A-F	965-0162	965-0268B	965-0762
P218G	G-H	965-0182B	965-0268B	965-0762
P218G Lincoln	B-F	965-0162	965-0268B	965-0762
P218G Lincoln	G-H	965-0167	965-0268B	965-0762
P218G Miller	B-D	965-0163	965-0268B	965-0163
P218G Miller	E-H	965-0163	965-0268B	965-0163
P218V	A-F	965-0164	965-0265B	965-0763
P218V	G-H	965-0180	965-0265B	965-0763
P220G	A-F	965-0162	965-0268B	965-0762
P220G	G-H	965-0182B	965-0268B	965-0762
P220G Miller	B-D	965-0163	965-0268B	965-0163
P220G Miller	E-H	965-0163	965-0268B	965-0163
P220GIOHV	A	983-0100B	983-0200B	983-0500
P220V	A-F	965-0164	965-0265B	965-0763
P220V	G-H	965-0180	965-0265B	965-0763
P224G	B-F	965-0162	965-0266C	965-0762
P224G	G-H	965-0182B	965-0266C	965-0762
P248V	G	965-0181	965-0265B	965-0763
P248V	H	965-0183	965-0265B	965-0763B
<b>R</b>				
RCCK	A	927-0152	927-0256	927-0752
RDJE	A	974-0150	974-0252	974-0250
RDJEA	A	974-0150	974-0252	974-0250
RDJF	A	974-0151	974-0253	974-0753
<b>T</b>				
T260G	A-G	965-0160	965-0260	965-0760
<b>Z</b>				
ZX390	D	—	965-0202B	—
ZXV390	E	—	970-0200B	—
ZXV390	F	—	965-0200B	—

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>A</b>							
A41	E	904-0132	934-0236	—	934-0502	934-0502	900-0522
A61	E	904-0132	934-0236	—	934-0502	934-0502	—
AH	AC MODEL	908-0017	—	—	—	—	—
AJ 0.8-2.5 kw	A-P	924-0121	924-0221	924-0502	924-0502	924-0502	—
AJ RV 2.7 kw	K-N	924-0120	924-0502	924-0502	924-0502	924-0611	—
AJ RV 3.0 kw	P-S	924-0122	924-0222	924-0502	924-0502	924-0502	924-0611
AK	A-N	925-0120	925-0220	—	—	—	—
AT61	B	904-0132	934-0236	—	934-0502	934-0502	—
<b>B</b>							
BF Power Drawer	A	—	—	965-0250	900-0196	900-0196	—
BF RV	A-B	—	—	900-0337	900-0337	900-0337	—
BFA AUX	A	965-0124	965-0224	900-0337	900-0337	900-0337	900-0322
BFA RV	A-D	965-0122	965-0222	900-0337	900-0337	900-0337	965-0612
BFA Utility	C-D	965-0122	965-0262	900-0337	900-0337	900-0337	—
BFAB	J	965-0123	965-0223	965-0754	900-0193	900-0193	—
BGA RV	A-D	965-0121	965-0221	900-0337	900-0337	900-0337	965-0611
BGAL RV	C	965-0127	965-0227	900-0337	900-0337	900-0337	965-0627
BGD/BGDL	A-G	965-0129	965-0228	965-0529	965-0529	965-0529	965-0629
BGD/BGDL	H	965-0129	965-0228	965-0500	965-0500	965-0500	965-0629
BGD/BGDL	J-K	965-0135	965-0228	965-0500	965-0500	965-0500	965-0632
BGD/BGDL	L-M	965-0175	965-0228	965-0500	965-0500	965-0500	965-0632
BGE	A-E	965-0130	965-0232	965-0530	965-0530	965-0530	965-0630
BGE	F-L	965-0128	965-0231	965-0528	965-0528	965-0528	965-0628
BGE	M-P	965-0176	965-0231	965-0528	965-0528	965-0528	965-0628
BGE Tracker	J-K	965-0132	965-0231	965-0528	965-0528	965-0528	965-0626
BGE Tracker	M-N	965-0177	965-0231	965-0528	965-0528	965-0528	965-0626
BGEL	B-D	965-0130	965-0232	965-0530	965-0530	965-0530	965-0630
BGEL	E	965-0128	965-0231	965-0528	965-0528	965-0528	965-0628
BGM	A-E	965-0131	965-0267	965-0531B	965-0531B	965-0531B	965-0631
BGM	F	965-0136	965-0267	965-0531B	965-0531B	965-0531B	965-0631
BT41	B-J	960-0143	960-0231	NA	960-0505	960-0505	960-0610
BT42	B-J	960-0143	960-0231	NA	960-0505	960-0505	960-0610

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>B (Continued)</b>							
BT61	B-J	960-0143	960-0232	NA	960-0505	960-0505	960-0610
BT62	B-J	960-0143	960-0232	NA	960-0505	960-0505	960-0610
<b>C</b>							
CCK	A-K	927-0300	927-0300	927-0500	927-0500	927-0500	—
CCK	R-V	927-0122	927-0222	927-0754	900-0196	900-0196	—
CCK Mobile/ RV	A-Q	—	927-0220	927-0500	927-0500	927-0500	—
CCK Mobile/ RV	R-U	927-0120	927-0220	927-0754	900-0196	900-0196	—
CCK Standby	A-P	927-0300	927-0300	927-0500	927-0500	927-0500	—
CCK Standby	R-V	927-0360	927-0360	927-0754	900-0196	900-0196	—
CCK Welder	A-D	—	—	—	—	—	—
CCK Welder	F-T	927-0155	927-0255	—	—	—	—
CCKB	A-E	927-0123	927-0223	927-0754	927-0503	927-0503	—
CT61	B-H	960-0144	960-0233	NA	960-0505	960-0505	960-0610
CTA61	B-H	960-0144	960-0233	NA	960-0505	960-0505	960-0610
CTA62	B-H	960-0144	960-0233	NA	960-0505	960-0505	960-0610
<b>DB</b>							
DBBB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DBBC	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DBBD	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DBCA	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DBCB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DBDA	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DBDB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DBEA	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DBEB	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DBFA	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DBFB	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DBGA	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DBGB	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DBGC	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DBHA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DBJA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DB (Continued)</b>							
DBJB	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DBKA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DBLA	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
DBLB	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
DBMA	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
<b>DC</b>							
DCBB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DCBC	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DCBD	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DCCA	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DCCB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DCDA	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DCDB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DCEA	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DCEB	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DCFA	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DCFB	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DCGA	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DCGB	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DCGC	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DCHA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DCJA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DCJB	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DCKA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DCLA	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
DCLB	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
DCMA	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
<b>DD</b>							
DDA	A-C	944-0122	—	NA	900-0150	900-0150	—
DDA	D	944-0122	—	NA	900-0150	900-0150	—
DDB	A-E	944-0122	—	NA	900-0150	900-0150	—

\* - PCC Control Service Manual 960-0507      \* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.  
 \*\* - Detector Control Service Manual 960-0504      # - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DE</b>							
DEB	A	—	—	NA	—	—	—
DEC	A-B	—	—	NA	—	—	—
DEF	A-C	—	—	NA	—	—	—
DEF	D-L	—	977-0220	NA	900-0150	900-0150	—
DEG	A-B	—	—	NA	—	—	—
DEG	C-K	977-0121	—	NA	900-0150	900-0150	—
DEH	A	—	—	NA	—	—	—
DEH	B-J	—	—	NA	900-0150	900-0150	—
<b>DF</b>							
DFAA	A-C	960-0149	960-0260	NA	960-0504*	960-0504*	960-0614
DFAA	A-G	—	960-0260B	NA	—	—	—
DFAA	D-G	960-0100B	960-0260B	NA	960-0507**	960-0507**	960-0619D
DFAB	A-C	960-0149	960-0260	NA	960-0504*	960-0504*	960-0614
DFAB	D-G	960-0100	960-0260	NA	960-0507**	960-0507**	960-0619
DFAB	H-K	960-0100B	960-0260B	NA	960-0507**	960-0507**	960-0619D
DFAB	M	960-0167	960-0298	N/A	960-0519B	960-0519B	960-0634B
DFAC	A-C	960-0149	960-0260	NA	960-0504*	960-0504*	960-0614
DFAC	A-K	—	960-0260B	—	—	—	—
DFAC	D-G	960-0100	960-0260	NA	960-0507**	960-0507**	960-0619
DFAC	H-K	960-0100B	960-0260B	NA	960-0507**	960-0507**	960-0619D
DFAC	M	960-0167	960-0298	N/A	960-0519B	960-0519B	960-0634B
DFBC	A-D	960-0138	—	NA	960-0504*	960-0504*	960-0606
DFBC	E-F	960-0138	960-0204	NA	960-0504*	960-0504*	960-0606
DFBD	A-F	960-0138	960-0204	NA	960-0504*	960-0504*	960-0606
DFBE	A-F	960-0138	960-0204	NA	960-0504*	960-0504*	960-0606
DFBF	A-G	960-0138	960-0204	NA	960-0504*	960-0504*	960-0606
DFBF	H-J	960-0138	960-0276C	NA	960-0504*	960-0504*	960-0606
DFBF	K-W	960-0101C	960-0276C	NA	960-0507**	960-0507**	960-0619D
DFBF	Y	960-0168	960-0219	N/A	960-0519B	960-0519B	960-0634B
DFCB	A-G	960-0138	960-0204	NA	960-0504*	960-0504*	960-0606
DFCB	H-J	960-0138	960-0276C	NA	960-0504*	960-0504*	960-0606
DFCB	K-W	960-0101C	960-0276C	NA	960-0507**	960-0507**	960-0619D
DFCB	Y	960-0168	960-0219	N/A	960-0519B	960-0519B	960-0634B

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later



# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
DF (Continued)							
DFCC	A-G	960-0138	960-0204	NA	960-0504*	960-0504*	960-0606
DFCC	H-J	960-0138	960-0276C	NA	960-0504*	960-0504*	960-0606
DFCC	K-W	960-0101C	960-0276C	NA	960-0507**	960-0507**	960-0619D
DFCC	Y	960-0168	960-0219	N/A	960-0519B	960-0519B	960-0634B
DFCE	A-G	960-0101C	960-0276C	NA	960-0507**	960-0507**	960-0619D
DFCE	H	960-0168	960-0219	N/A	960-0519B	960-0519B	960-0634B
DFD	A-F	—	—	NA	—	—	—
DFE	H-L	956-0120	956-0220	NA	900-0150	900-0150	—
DFE	M	960-0132	956-0220	NA	943-0019	982-0002	960-0601
DFEB	E-H	960-0139	960-0240	NA	960-0504*	960-0504*	960-0607
DFEB	J	960-0139	960-0286	NA	960-0504*	960-0504*	960-0607
DFEB	K-S	960-0102B	960-0286	NA	960-0507**	960-0507**	960-0619D
DFEC	A-B	960-0139	960-0240	NA	960-0504*	960-0504*	960-0607
DFEC	C	960-0139	960-0286	NA	960-0504*	960-0504*	960-0607
DFEC	D-K	960-0102B	960-0286	NA	960-0507**	960-0507**	960-0619D
DFED	A-G	960-0102B	960-0286	NA	960-0507**	960-0507**	960-0619D
DFEG	A-B	960-0155C	960-0279C	—	960-0513	960-0513	960-0621C
DFEG	C	960-0174	960-0299	NA	—	—	960-0633
DFEH	A-B	960-0155C	960-0279C	—	960-0513	960-0513	960-0621C
DFEH	C	960-0174	960-0299	NA	—	—	960-0633
DFEJ	A-B	960-0155C	960-0279C	—	960-0513	960-0513	960-0621C
DFEJ	C	960-0174	960-0299	NA	—	—	960-0633
DFEK	A-B	960-0155C	960-0279C	—	960-0513	960-0513	960-0621C
DFEK	C	960-0174	960-0299	NA	—	—	960-0633
DFFA	E-F	960-0139	960-0240	NA	960-0504*	960-0504*	960-0607
DFFB	E-H	960-0139	960-0240	NA	960-0504*	960-0504*	960-0607
DFFB	J	960-0139	960-0286	NA	960-0504*	960-0504*	960-0607
DFFB	K-L	960-0102B	960-0286	NA	960-0507**	960-0507**	960-0619D
DFGA	A-C	960-0145	960-0259B	NA	960-0504*	960-0504*	960-0611
DFGA	D-H	960-0103C	960-0259B	—	960-0507B**	960-0507B**	960-0619D
DFGB	A-C	960-0145	960-0259B	NA	960-0504*	960-0504*	960-0611
DFGB	D-G	960-0103	960-0259B	NA	960-0507**	960-0507**	960-0619
DFGB	H	960-0103C	—	NA	960-0507B**	960-0507B**	960-0619D

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
DF (Continued)							
DFGB	J	960-0169	960-0295	N/A	960-0519B	960-0519B	960-0630B
DFGC	A	960-0145	960-0259B	NA	960-0504*	960-0504*	960-0611
DFGE	A	960-0103C	960-0289	—	960-0507B**	960-0507B**	960-0619D
DFGE	B	960-0169	960-0295	N/A	960-0519B	960-0519B	960-0630B
DFHA	A-C	960-0106C	960-0241D	NA	960-0509C	960-0509C	960-0617C
DFHA	D-F	960-0106D	960-0241D	—	960-0509C	960-0509C	960-0617D
DFHB	A-C	960-0106C	960-0241D	NA	960-0509C	960-0509C	960-0617C
DFHB	D-F	960-0106D	960-0241D	—	960-0509C	960-0509C	960-0617D
DFHC	A-C	960-0106C	960-0241D	NA	960-0509C	960-0509C	960-0617C
DFHC	D-E	960-0106D	960-0241D	—	960-0509C	960-0509C	960-0617D
DFHD	A-C	960-0106D	960-0241D	—	960-0509C	960-0509C	960-0617D
DFJA	E-H	960-0142	960-0263	NA	960-0504*	960-0504*	960-0609
DFJA	J-M	960-0104B	960-0277	NA	960-0507**	960-0507**	960-0619D
DFJB	E-H	960-0142	960-0263	NA	960-0504*	960-0504*	960-0609
DFJB	J-M	960-0104B	960-0277	NA	960-0507**	960-0507**	960-0619D
DFJC	E-H	960-0142	960-0263	NA	960-0504*	960-0504*	960-0609
DFJC	J-R	960-0104	960-0277	NA	960-0507**	960-0507**	960-0619
DFJC	S	960-0104B	—	—	960-0507**	960-0507**	960-0619D
DFJD	A	960-0142	960-0263	NA	960-0504*	960-0504*	960-0609
DFJD	B-H	960-0104	960-0277	NA	960-0507**	960-0507**	960-0619
DFJD	J	960-0104B	—	—	960-0507**	960-0507**	960-0619D
DFK	A-B	960-0002	—	NA	—	—	960-0002
DFLA	E-H	960-0140	960-0264	NA	960-0504*	960-0504*	960-0608
DFLB	E-J	960-0140	960-0264	NA	960-0504*	960-0504*	960-0608
DFLB	K-R	960-0152B	960-0283B	NA	960-0507**	960-0507**	960-0619D
DFLB	S	960-0170	960-0296	N/A	960-0519B	960-0519B	960-0630B
DFLC	E-J	960-0140	960-0264	NA	960-0504*	960-0504*	960-0608
DFLC	K-U	960-0152B	960-0283B	NA	960-0507**	960-0507**	960-0619B
DFLC	V	960-0170	960-0296	N/A	960-0519B	960-0519B	960-0630B
DFLD	E-J	960-0140	960-0264	NA	960-0504*	960-0504*	960-0608
DFLD	K-N	960-0152	960-0283	NA	960-0507**	960-0507**	960-0619
DFLE	A-C	960-0152B	960-0271B	NA	960-0507**	960-0507**	960-0619D
DFLE	D	960-0170	960-0296	N/A	960-0519B	960-0519B	960-0630B

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DF (Continued)</b>							
DFM	A-G	960-0302	960-0302	NA	900-0181	900-0181	—
DFM	H-M	960-0120	960-0220	NA	900-0181	900-0181	—
DFM	N	960-0133	960-0220	NA	943-0019	943-0017	960-0602
DFMB	E-J	960-0140	960-0264	NA	960-0504*	960-0504*	960-0608
DFMB	K-T	960-0152B	960-0283B	NA	960-0507**	960-0507**	960-0619D
DFN 350 kw	A-C	960-0121	960-0221	NA	900-0181	900-0181	—
DFN 350 kw	D	960-0134	960-0221	NA	943-0019	943-0017	960-0603
DFN 400 kw	C	960-0124	960-0224	NA	900-0192	900-0192	—
DFN 400 kw	D	960-0134	960-0224	NA	943-0019	943-0018	960-0603
DFP	A-D	960-0301	960-0301	NA	900-0181	900-0181	—
DFP	H-L	960-0122	960-0222	NA	900-0181	900-0181	—
DFP	M	960-0133	960-0222	NA	943-0019	943-0017	960-0602
DFQ	A	—	—	NA	—	—	—
DFS	A-C	960-0123	960-0223	NA	900-0181	900-0181	—
DFT	A-C	960-0308	960-0308	NA	—	—	—
DFT	E	—	—	NA	—	—	—
DFU	A-D	960-0308	960-0308	NA	—	—	—
DFU	E	—	—	NA	—	—	—
DFV	A-G	960-0308	960-0308	NA	900-0192	900-0192	—
DFV	H-K	960-0126	960-0228	NA	900-0192	900-0192	—
DFW	A-D	960-0307	960-0307	NA	900-0192	900-0192	—
DFW	E-G	960-0127	960-0228	NA	900-0192	900-0192	—
DFW	H	960-0135	—	NA	943-0019	943-0018	960-0604
DFX	A-D	960-0225	—	NA	900-0192	900-0192	—
DFY	A	—	—	NA	900-0192	900-0192	—
DFY	B-D	960-0129	960-0229	NA	900-0192	900-0192	—
DFY	E	960-0135	960-0229	NA	943-0019	943-0018	960-0604
DFZ	A-D	960-0230	—	NA	900-0192	900-0192	—
DFZ	E	960-0135	960-0230	NA	943-0019	943-0018	960-0604
<b>DG</b>							
DGAB	F	934-0125	934-0236	NA	934-0502	934-0502	934-0601
DGAC	F	934-0125	934-0236	NA	934-0502	934-0502	934-0601
DGAD	F	934-0125	934-0236	NA	934-0502	934-0502	934-0601

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DG (Continued)</b>							
DGAE	C	934-0125	934-0236	NA	934-0502	934-0502	934-0601
DGBA	B-J	960-0143	960-0231	NA	960-0505	960-0505	960-0610
DGBB	A-B	960-0143	960-0231	NA	960-0505	960-0505	960-0610
DGBB	C	960-0143	960-0207	NA	960-0505	960-0505	960-0610
DGBB	K	960-0165B	960-0291B	NA	960-0518B	960-0518B	960-0628B
DGBB w/PCC	E-J	960-0107D	960-0210D*	NA	960-0511B	960-0511B	960-0618D
DGBC	A	960-0143	960-0231	NA	960-0505	960-0505	960-0610
DGBC	B	960-0143	960-0207	NA	960-0505	960-0505	960-0610
DGBC	C-H	960-0107D	960-0210D	NA	960-0510B	960-0510B	960-0618D
DGBC	J	960-0165B	960-0291B	NA	960-0518B	960-0518B	960-0628B
DGBC w/PCC	D-H	960-0107D	960-0210D*	NA	960-0511B	960-0511B	960-0618D
DGCA	A	960-0136	960-0242	NA	943-0019	982-0002	960-0605
DGCA	B-J	960-0143	960-0231	NA	960-0505	960-0505	960-0610
DGCA	K	960-0143	960-0207	NA	960-0505	960-0505	960-0610
DGCA	L-S	960-0107D	960-0210D	NA	960-0510B	960-0510B	960-0618D
DGCA	T	960-0165B	960-0291B	NA	960-0518B	960-0518B	960-0628B
DGCA w/PCC	M-S	960-0107D	960-0210D	NA	960-0511B	960-0511B	960-0618D
DGCB	A	960-0136	960-0242	NA	943-0019	982-0002	960-0605
DGCB	B-J	960-0143	960-0231	NA	960-0505	960-0505	960-0610
DGCB	K	960-0143	960-0207	NA	960-0505	960-0505	960-0610
DGCB	L-S	960-0107D	960-0210D	NA	960-0510B	960-0510B	960-0618
DGCB	T	960-0165B	960-0291B	NA	960-0518B	960-0518B	960-0628B
DGCC	A-B	960-0107D	960-0210D	NA	960-0510B	960-0510B	960-0618D
DGCC w/PCC	A-B	960-0107D	960-0210D*	NA	960-0511B	960-0511B	960-0618D
DGCG	A	960-0165B	960-0291B	NA	960-0518B	960-0518B	960-0628B
DGDA	A	960-0136	960-0243	NA	943-0019	982-0002	960-0605
DGDA	B-J	960-0143	960-0232	NA	960-0505	960-0505	960-0610
DGDA	K	960-0143	960-0208	NA	960-0505	960-0505	960-0610
DGDA	L-P	960-0107D	960-0211D	NA	960-0510B	960-0510B	960-0618D
DGDA	R	960-0164	960-0290	NA	960-0518	960-0518	960-0627
DGDA w/PCC	L-P	960-0107D	960-0211D*	NA	960-0511B	960-0511B	960-0618D
DGDB	A	960-0136	960-0243	NA	943-0019	982-0002	960-0605
DGDB	B-J	960-0143	960-0232	NA	960-0505	960-0505	960-0610

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DG (Continued)</b>							
DGDB	K	960-0143	960-0208	NA	960-0505	960-0505	960-0610
DGDB	L-P	960-0107D	960-0211D	NA	960-0510B	960-0510B	960-0618D
DGDB	R	960-0164	960-0290	NA	960-0518	960-0518	960-0627
DGDB w/PCC	L-P	960-0107D	960-0211D*	NA	960-0511B	960-0511B	960-0618D
DGDK	A	960-0107D	960-0211D	NA	960-0511B	960-0511B	960-0618D
DGDK	B	960-0164	960-0290	NA	960-0518	960-0518	960-0627
DGEA	A	960-0137	960-0244	NA	943-0019	982-0002	960-0605
DGEA	B-H	960-0144	960-0233	NA	960-0505	960-0505	960-0610
DGEA	J	960-0144	960-0209	NA	960-0505	960-0505	960-0610
DGEA	K-N	960-0107D	960-0211D	NA	960-0510B	960-0510B	960-0618D
DGEA w/PCC	K-N	960-0107D	960-0211D*	NA	960-0511B	960-0511B	960-0618D
DGFA	A	960-0137	960-0244	NA	943-0019	982-0002	960-0605
DGFA	B-H	960-0144	960-0233	NA	960-0505	960-0505	960-0610
DGFA	J	960-0144	960-0209	NA	960-0505	960-0505	960-0610
DGFA	K-N	960-0107D	960-0211D	NA	960-0510B	960-0510B	960-0618D
DGFA	P	960-0165	960-0297		960-0518	960-0518	960-0628
DGFA w/PCC	K-N	960-0107D	960-0211D*	NA	960-0511B	960-0511B	960-0618D
DGFB	B-H	960-0144	960-0233	NA	960-0505	960-0505	960-0610
DGFB	J	960-0144	960-0209	NA	960-0505	960-0505	960-0610
DGFB	K-N	960-0107D	960-0211D	NA	960-0510B	960-0510B	960-0618D
DGFB	P	960-0165	960-0297		960-0518	960-0518	960-0628
DGFB w/PCC	K-M	960-0107D	960-0211D*	NA	960-0511B	960-0511B	960-0618D
DGFC	A-E	960-0107D	960-0211D	NA	960-0510B	960-0510B	960-0618D
DGFC	L	960-0165	960-0297	NA	960-0518	960-0518	960-0628
DGFC w/PCC	A-E	960-0107D	960-0211D*	NA	960-0511B	960-0511B	960-0618D
DGGD	A	960-0162	960-0287	NA	960-0517	960-0517	960-0626
DGGD	B	960-0166	—	NA	960-0520B	960-0520B	960-0629
DGHD	A	960-0162	960-0287	NA	960-0517	960-0517	960-0626
DGHD	B	960-0166	—	NA	960-0520B	960-0520B	960-0629
DGHE	A	960-0162	960-0287	NA	960-0517	960-0517	960-0626
DGHE	B	960-0166	—	NA	960-0520B	960-0520B	960-0629

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DH</b>							
DHA	A	—	—	NA	—	—	—
DHB	A	—	—	NA	—	—	—
DHH	A	945-0120	945-0220	NA	—	—	—
<b>DJ</b>							
DJA	A-V	967-0124	967-0224	967-0755	—	—	—
DJB	A-AC	967-0121	967-0221	967-0751	900-0184	900-0184	—
DJB	D#	967-0108	967-0221	967-0751	967-0506	967-0506	967-0108
DJB Welder	R-T	967-0153	967-0253	967-0751	—	—	—
DJC	A-AD	967-0122	967-0222	967-0751	900-0184	900-0184	—
DJC	E#	967-0108	967-0222	967-0751	967-0506	967-0506	967-0108
DJE	AB-AG	967-0121	967-0225	967-0751	900-0184	900-0184	—
DJE	H	967-0108	967-0225	967-0751	967-0506	967-0506	967-0108
<b>DK</b>							
DKAC	A	981-0138	981-0254B	981-0521	981-0519	981-0519	981-0606
DKAE	A-B	981-0138	981-0254B	981-0521	981-0519	981-0519	981-0606
DKAE Rem Term	A	981-0141	981-0255	981-0521	981-0519	981-0519	981-0609
DKAF	A-C	981-0138	981-0254B	981-0521	981-0519	981-0519	981-0606
DKAF Rem Term	A-B	981-0141	981-0255	981-0521	981-0519	981-0519	981-0609
DKAH Rem Term	A	981-0141	981-0255	981-0521	981-0519	981-0519	981-0609
DKC	A-B	981-0121	981-0221	981-0501	981-0502	981-0502	—
DKC	C	981-0121	—	981-0501	981-0502	981-0502	—
DKC AUX	A-B	981-0125	981-0239	981-0501	981-0502	981-0502	981-0625
DKC AUX	C	981-0125	—	981-0501	981-0502	981-0502	981-0625
DKC RV	A-B	981-0124	981-0239	981-0501	981-0502	981-0502	981-0624
DKD	A-C	981-0121	981-0223	981-0501	981-0502	981-0502	—
DKD	D-E	981-0121	981-0240B	981-0501	981-0502	981-0502	—
DKD AUX	A-D	981-0125	981-0240B	981-0501	981-0502	981-0502	981-0625
DKD AUX	E	981-0125	981-0240B	981-0501	981-0502	981-0502	981-0625
DKD RV	A-D	981-0124	981-0240B	981-0501	981-0502	981-0502	981-0624
DKD RV	E	981-0124	981-0240B	981-0501	981-0502	981-0502	981-0624
DKG	A	981-0133	981-0245	981-0501	981-0511	981-0511	981-0601

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DK (Continued)</b>							
DKX	1A	981-0135	981-0250	981-0514	981-0513	981-0513	981-0603
DKX	2A	981-0135	981-0250	981-0514	981-0513	981-0513	981-0628
DKX	2B	981-0135	—	981-0514	981-0513	981-0513	981-0628
DKX	C-E	981-0150	—	981-0514	981-0513	981-0513	981-0628
DKX HD Veh HVAC	All	—	—	981-0515	—	—	—
<b>DL</b>							
DL3 RV	A	934-0122	934-0233	NA	934-0501	934-0501	934-0600
DL4	A-B	934-0120	—	—	NA	900-0336	900-0336
DL4	C-F	934-0125	934-0236	NA	943-0019	943-0020	934-0601
DL4B	A-B	934-0121	934-0222	NA	900-0339	900-0339	—
DL6	A	934-0120	934-0229	NA	900-0336	900-0336	—
DL6	C-F	934-0125	934-0236	NA	943-0019	943-0020	934-0601
DL6B	A-B	934-0121	934-0223	NA	900-0339	900-0339	—
DL6T	A	934-0120	934-0236	NA	900-0336	900-0336	—
DL6T	B-C	934-0125	934-0236	NA	943-0019	943-0020	934-0601
DL6TB	A-B	934-0121	934-0228	NA	900-0339	900-0339	—
DLB	C-E	934-0120	934-0236	NA	943-0019	943-0020	—
DLC	C-E	934-0120	934-0236	NA	943-0019	943-0020	—
DLCA	A-E	934-0120	934-0236	NA	943-0019	943-0020	—
<b>DM</b>							
DMBB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DMBC	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DMBD	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DMCA	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DMCB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DMDA	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DMDB	A-B	903-0124	903-0204	NA	903-0500	903-0500	903-0604
DMEA	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DMEB	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DMFA	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DMFB	A-B	903-0125	903-0205	NA	903-0500	903-0500	903-0605
DMGA	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DMGB	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DM (Continued)</b>							
DMGC	A-B	903-0126	903-0206	NA	903-0500	903-0500	903-0606
DMHA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DMJA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DMJB	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DMKA	A-B	903-0127	903-0207	NA	903-0500	903-0500	903-0607
DMLA	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
DMLB	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
DMMMA	A-B	903-0128	903-0208	NA	903-0500	903-0500	903-0608
<b>DN</b>							
DNAA	A	967-0109	967-0200B	967-0508B	967-0508B	967-0508B	967-0600
DNAA	B	967-0111	967-0200B	967-0508B	967-0508B	967-0508B	967-0602
DNAB	A	967-0109	967-0200B	967-0508B	967-0508B	967-0508B	967-0600
DNAB	B	967-0111	967-0200B	967-0508B	967-0508B	967-0508B	967-0602
DNAC	A	967-0109	967-0201B	967-0508B	967-0508B	967-0508B	967-0600
DNAC	B	967-0111	967-0201B	967-0508B	967-0508B	967-0508B	967-0602
DNAD	A	967-0109	967-0201B	967-0508B	967-0508B	967-0508B	967-0600
DNAD	B	967-0111	967-0201B	967-0508B	967-0508B	967-0508B	967-0602
DNAE	A	967-0109	967-0201B	967-0508B	967-0508B	967-0508B	967-0600
DNAE	B	967-0111	967-0201B	967-0508B	967-0508B	967-0508B	967-0602
DNAF	A	967-0109	967-0201B	967-0508B	967-0508B	967-0508B	967-0600
DNAF	B	967-0111	967-0201B	967-0508B	967-0508B	967-0508B	967-0602
DNBA	A	904-0121	904-0200	NA	904-0503	904-0503	904-0601
DNCA	A	904-0121	904-0200	NA	904-0503	904-0503	904-0601
DNCB	A	904-0121	904-0200	NA	904-0503	904-0503	904-0601
DNDA	A	904-0121	904-0201	NA	904-0503	904-0503	904-0601
DNDB	A	904-0121	904-0201	NA	904-0503	904-0503	904-0601
DNEA	A	904-0122	904-0202	NA	904-0503	904-0503	904-0602
DNFA	A	904-0122	904-0202	NA	904-0503	904-0503	904-0602
<b>DP</b>							
DPBB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DPBC	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DPBD	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DPCA	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later



## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DP (Continued)</b>							
DPCB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DPDA	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DPDB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DPEA	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DPEB	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DPFA	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DPFB	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DPGA	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DPGB	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DPGC	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DPHA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DPJA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DPJB	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DPKA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DPLA	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
DPLB	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
DPMA	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-06
<b>DQ</b>							
DQAA	A-E	960-0100B	960-0268B	NA	960-0507**	960-0507**	960-0619D
DQAB	A-E	960-0100B	960-0268B	NA	960-0507**	960-0507**	960-0619D
DQAD	A	960-0159	960-0217	NA	960-0516	960-0516	960-0624
DQAD	B	960-0159	960-0218	NA	960-0516	960-0516	960-0624
DQAE	A	960-0159	960-0217	NA	960-0516	960-0516	960-0624
DQAE	B	960-0159	960-0218	NA	960-0516	960-0516	960-0624
DQAF	A	960-0159	960-0217	NA	960-0516	960-0516	960-0624
DQAF	B	960-0159	960-0218	NA	960-0516	960-0516	960-0624
DQBA	A-F	960-0101B	960-0268B	NA	960-0507	960-0507	960-0619D
DQBB	A-F	960-0101B	960-0268B	NA	960-0507	960-0507	960-0619D
DQKB	A-C	960-0161	960-0284	NA	960-0512	960-0512	960-0620B
DQKB	D	960-0161	960-0284	NA	960-0512	960-0512	960-0625B
DQKC	A-C	960-0161	960-0284	NA	960-0512	960-0512	960-0620B
DQKC	D	960-0161	960-0284	NA	960-0512	960-0512	960-0625B
DQKH	A	961-0100	961-0200	NA	—	—	961-0600

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DR</b>							
DRBB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DRBC	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DRBD	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DRCA	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DRCB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DRDA	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DRDB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DREA	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DREB	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DRFA	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DRFB	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DRGA	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DRGB	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DRGC	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DRHA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DRJA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DRJB	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DRKA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DRLA	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
DRLB	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
DRMA	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
<b>DS</b>							
DSL	A-D	—	—	NA	—	—	—
<b>DT</b>							
DTA	A-C	961-0120	961-0220	NA	900-0184	900-0184	NA
DTBA	A	903-0121	903-0200	NA	903-0500	903-0500	903-0601
DTCA	A	903-0121	903-0200	NA	903-0500	903-0500	903-0601
DTCB	A	903-0121	903-0200	NA	903-0500	903-0500	903-0601
DTDA	A	903-0121	903-0201	NA	903-0500	903-0500	903-0601
DTDB	A	903-0121	903-0201	NA	903-0500	903-0500	903-0601
DTEA	A	903-0122	903-0202	NA	903-0500	903-0500	903-0602
DTFA	A	903-0122	903-0202	NA	903-0500	903-0500	903-0602

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DV</b>							
DVA	A-B	982-0120	982-0221	NA	982-0001	982-0002	982-0600
DVB	A-B	982-0120	982-0222	NA	982-0001	982-0002	982-0600
DVC	A-B	982-0121	982-0223	NA	982-0001	982-0002	982-0600
DVD	A-B	982-0121	982-0224	NA	982-0001	982-0002	982-0600
DVE	A-B	982-0121	982-0225	NA	982-0001	982-0002	982-0600
DVF 175 kw	A-B	982-0122	982-0226	NA	982-0001	982-0002	982-0600
DVF 200 kw	A-B	982-0122	982-0226	NA	982-0001	982-0003	982-0601
DVG	A-B	982-0122	982-0227	NA	982-0001	982-0003	982-0601
DVH	A-B	982-0123	982-0228	NA	982-0001	982-0004	982-0602
DVJ	A	982-0123	982-0229	NA	982-0001	982-0004	982-0602
<b>DW</b>							
DWBA	A	904-0121	904-0200	NA	904-0503	904-0503	904-0601
DWCA	A	904-0121	904-0200	NA	904-0503	904-0503	904-0601
DWCB	A	904-0121	904-0200	NA	904-0503	904-0503	904-0601
DWDA	A	904-0121	904-0201	NA	904-0503	904-0503	904-0601
DWDB	A	904-0121	904-0201	NA	904-0503	904-0503	904-0601
DWEA	A	904-0122	904-0202	NA	904-0503	904-0503	904-0602
DWFA	A	904-0122	904-0202	NA	904-0503	904-0503	904-0602
<b>DX</b>							
DXBA	A	903-0121	903-0200	NA	903-0500	903-0500	903-0601
DXCA	A	903-0121	903-0200	NA	903-0500	903-0500	903-0601
DXCB	A	903-0121	903-0200	NA	903-0500	903-0500	903-0601
DXDA	A	903-0121	903-0201	NA	903-0500	903-0500	903-0601
DXDB	A	903-0121	903-0201	NA	903-0500	903-0500	903-0601
DXEA	A	903-0122	903-0202	NA	903-0500	903-0500	903-0602
DXFA	A	903-0122	903-0202	NA	903-0500	903-0500	903-0602
<b>DY</b>							
DYA	A	—	—	NA	900-0150	900-0150	—
DYB	B-J	—	—	NA	900-0150	900-0150	—
DYB	A-C	973-0303	973-0303	NA	900-0150	900-0150	—
DYB	D	973-0310	973-0310	NA	900-0150	900-0150	—
DYC	A-K	973-0122	973-0222	NA	900-0150	900-0150	—
DYD	A-E	973-0305	973-0305	NA	900-0150	900-0150	—

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>DY (Continued)</b>							
DYD	F-M	973-0123	—	NA	900-0150	900-0150	—
DYG	A-H	973-0124	973-0224	NA	900-0150	900-0150	—
DYH	A-B	—	—	NA	900-0181	900-0181	—
DYH	C-D	973-0125	—	NA	900-0181	900-0181	—
DYJ	A-D	973-0126	973-0226	NA	900-0150	900-0150	—
<b>DZ</b>							
DZBB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DZBC	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DZBD	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DZCA	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DZCB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DZDA	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DZDB	A-B	904-0124	904-0204	NA	904-0503	904-0503	904-0604
DZEA	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DZEB	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DZFA	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DZFB	A-B	904-0125	904-0205	NA	904-0503	904-0503	904-0605
DZGA	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DZGB	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DZGC	A-B	904-0126	904-0206	NA	904-0503	904-0503	904-0606
DZHA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DZJA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DZJB	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DZKA	A-B	904-0127	904-0207	NA	904-0503	904-0503	904-0607
DZLA	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
DZLB	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
DZMA	A-B	904-0128	904-0208	NA	904-0503	904-0503	904-0608
<b>E</b>							
EGH 1.4 50 Hz	A-C	981-0131	981-0242B	981-0510	981-0510	981-0510	NA
EGH 1.7 60 Hz	A-C	981-0130	981-0242B	981-0510	981-0510	981-0510	NA
EGH 2.0 50 Hz	A-B	981-0131	981-0242B	981-0510	981-0510	981-0510	NA
* - PCC Control Service Manual 980-0507				* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.			
** - Detector Control Service Manual 960-0504				# - Built in 1994 or later			

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>E (Continued)</b>							
EGH 2.0 50 Hz	C	965-0100	981-0242B	965-0520	965-0520	965-0520	NA
EGH 2.5 60 Hz	A-B	981-0130	981-0242B	981-0510	981-0510	981-0510	NA
EGH 2.5 60 Hz	C	965-0100	981-0242B	965-0520	965-0520	965-0520	NA
EGH 3.5 50 Hz	A-B	981-0131	981-0243	981-0510	981-0510	981-0510	NA
EGH 3.5 50 Hz	C	965-0100	981-0243	965-0520	965-0520	965-0520	NA
EGH 4.0 60 Hz	A-B	981-0130	981-0243	981-0510	981-0510	981-0510	NA
EGH 4.0 60 Hz	C	965-0100	981-0243	965-0520	965-0520	965-0520	NA
EGH 5.0 50 Hz	A-B	981-0131	981-0249	981-0510	981-0510	981-0510	NA
EGH 5.0 50 Hz	C	965-0100	965-0203	965-0520	965-0520	965-0520	NA
EGH 5.0/6.0 60 Hz	A-B	981-0130	981-0244	981-0510	981-0510	981-0510	NA
EGH 5.0/6.0 60 Hz	C	965-0100	965-0203B	965-0520	965-0520	965-0520	NA
EGP	B-C	919-0100	919-0200	965-0520	965-0520	965-0520	NA
EGS	A-B	981-0130	981-0241	981-0510	981-0510	981-0510	NA
EK	A-B	—	—	NA	900-0150	900-0150	—
EK	C-N	928-0120	928-0220	NA	900-0150	900-0150	928-0602
EK	P-V	928-0120	928-0220	NA	943-0019	982-0002	928-0602
EK	W	928-0120	—	NA	928-0505	928-0505	928-0602
EK 35/30; 60/50 Hz	A-C	928-0120	928-0220	NA	943-0019	982-0002	928-0602
EK 35/30; 60/50 Hz	D	928-0120	—	NA	928-0505	928-0505	928-0602
EM	A-B	—	—	NA	900-0150	900-0150	—
EM	C-N	928-0120	928-0220	NA	900-0150	900-0150	928-0602
EM	P-V	928-0120	928-0220	NA	943-0019	982-0002	928-0602
EM	W	928-0120	—	NA	928-0505	928-0505	928-0602
EN	A-D	928-0121	928-0221	NA	900-0150	900-0150	—
EN	E-F	928-0126	928-0226	NA	943-0019	982-0002	928-0603

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>E (Continued)</b>							
ENA	A	928-0125	928-0228	NA	928-0500	928-0500	928-0604
ENA	B-F	928-0125	—	NA	928-0500	928-0500	928-0604
ENAD	A	928-0125	928-0228	NA	928-0500	928-0500	928-0604
ENAD	B-F	928-0125	—	NA	928-0500	928-0500	928-0604
ENB	A	928-0125	928-0228	NA	928-0500	928-0500	928-0604
ENB	B-F	928-0125	—	NA	928-0500	928-0500	928-0604
ENBA	A	928-0125	928-0228	NA	928-0500	928-0500	928-0604
ENBA	B-F	928-0125	—	NA	928-0500	928-0500	928-0604
ENC	A	928-0125	928-0228	NA	928-0500	928-0500	928-0604
ENC	B-F	928-0125	—	NA	928-0500	928-0500	928-0604
ENT	A-C	928-0121	928-0224	NA	900-0150	900-0150	928-0603
ENTX	A-B	928-0124	928-0225	NA	943-0019	982-0002	928-0600
ES	A-F	928-0122	928-0222	NA	900-0335	900-0335	928-0601
ES	G	928-0122	928-0222	NA	928-0504	928-0504	928-0601
ES Mobile	B-E	928-0122	928-0227	NA	900-0335	900-0335	928-0601
<b>G</b>							
GCAA	A	965-0140B	965-0205	NA	965-0533	965-0533	965-0634B
GCAA	C	965-0140B	965-0270	NA	965-0533	965-0533	965-0634B
GCAB	A	965-0140B	965-0205	NA	965-0533	965-0533	965-0634B
GCAB	C	965-0140B	965-0270	NA	965-0533	965-0533	965-0634B
GCAC	A	965-0140B	965-0205	NA	965-0533	965-0533	965-0634B
GCAC	C	965-0140B	965-0270	NA	965-0533	965-0533	965-0634B
GEAA	A	928-0127	928-0230	NA	928-0501	928-0501	928-0605
GEAA	B	928-0129	—	NA	928-0501	928-0501	928-0608
GEAB	A	928-0127	928-0230	NA	928-0501	928-0501	928-0605
GEAB	B	928-0129	928-0230	NA	928-0501	928-0501	928-0608
GEAD	A	928-0128	928-0231	NA	928-0501	928-0501	928-0606
GEAE	A	928-0128	928-0231	NA	928-0501	928-0501	928-0606
GEAE	B	928-0130	928-0231	NA	928-0501	928-0501	928-0609
GEAF	A	928-0128	928-0231	NA	928-0501	928-0501	928-0606
GEAF	B	928-0130	928-0231	NA	928-0501	928-0501	928-0609
GGDB	A-E	928-0132D	928-0233E	NA	928-0503D	928-0503D	928-0611D
GGFB	A	928-0131	928-0232B	NA	928-0502	928-0502	928-0610

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>G (Continued)</b>							
GGFB	B	928-0131B	928-0232B	—	928-0502B	928-0502B	928-0610B
GGFC	A	928-0131	928-0232B	NA	928-0502	928-0502	928-0610
GGFC	B	928-0131B	928-0232B	—	928-0502B	928-0502B	928-0610B
GGFD	A	928-0136B	928-0240B	—	928-0506B	928-0506B	928-0614B
GGFD	B-C	928-0139	928-0240B	—	928-0506E	928-0506E	928-0614C
GGFD	D		928-0243	—			
GGFE	A	928-0136B	928-0240B	—	928-0506B	928-0506B	928-0614B
GGFE	B-C	928-0139	928-0240B	—	928-0506E	928-0506E	928-0614C
GGFE	D		928-0243	—			
GGHB	A	928-0133	928-0234B	NA	928-0502	928-0502	928-0612
GGHB	B	928-0133B	928-0234B	—	928-0502B	928-0502B	928-0612B
GGHC	A	928-0133	928-0234B	NA	928-0502	928-0502	928-0612
GGHC	B	928-0133B	928-0234B	—	928-0502B	928-0502B	928-0612B
GGHD	A	928-0133	928-0234B	NA	928-0502	928-0502	928-0612
GGHE	A-B	928-0135B	928-0241B	—	928-0506B	928-0506B	928-0613B
GGHE	C-D	928-0140	928-0241B	—	928-0506E	928-0506E	928-0613C
GGHF	A-B	928-0135B	928-0241B	—	928-0506B	928-0506B	928-0613B
GGHF	C-D	928-0140	928-0241B	—	928-0506E	928-0506E	928-0613C
GGHG	A-B	928-0138B	928-0242	—	928-0506B	928-0506B	928-0615B
GGHG	C-D	928-0141	928-0242B	—	928-0506E	928-0506E	928-0615C
GGHH	A-B	928-0138B	928-0242	—	928-0506B	928-0506B	928-0615B
GGHH	C-D	928-0141	928-0242B	—	928-0506E	928-0506E	928-0615C
GGKB	A	963-0100B	963-0200	—	963-0500	963-0500	963-0600B
GGKC	A	963-0100B	963-0200	—	963-0500	963-0500	963-0600B
GGKD	A	963-0100B	963-0200	—	963-0500	963-0500	963-0600B
GHAB	A	965-0103B	965-0207	965-0503B	965-0503B	965-0503B	965-0601C
GNAA	A	967-0110	967-0202C	967-0509B	967-0509B	967-0509B	967-0601
GNAA	B-C	967-0112	967-0202C	967-0509C	967-0509C	967-0509C	967-0603
GNAB	A	967-0110	967-0202C	967-0509B	967-0509B	967-0509B	967-0601
GNAB	B-C	967-0112	967-0202C	967-0509C	967-0509C	967-0509C	967-0603
GNAC	A	967-0110	967-0202C	967-0509B	967-0509B	967-0509B	967-0601
GNAC	B-C	967-0112	967-0202C	967-0509C	967-0509C	967-0509C	967-0603
GRBA	A	965-0184	965-0271	NA	965-0532	965-0532	NA

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>G (Continued)</b>							
GRBB	A	965-0184	965-0271	—	965-0532	965-0532	NA
GTAA	A	950-0100	950-0200	—	—	—	950-0600
GTAB	A	950-0100	950-0200	—	—	—	950-0600
<b>H</b>							
HDCAA	A	981-0152C	981-0259C	981-0525	981-0526C	981-0526C	981-0615C
HDCAB	A	981-0152C	981-0259C	981-0525	981-0526C	981-0526C	981-0615C
HDCAC	A-B	981-0165	981-0259C	981-0525	981-0526C	981-0526C	981-0632
HDCAD	A	981-0165	981-0259C	981-0525	981-0526C	981-0526C	981-0632
HDKAG	A-B	981-0137	981-0252B	981-0517	981-0516	981-0516	981-0605
HDKAG	C-E	981-0149	981-0252C	981-0517	981-0516	981-0516	981-0605
HDKAJ	A-H	981-0161	981-0200D	981-0514	981-0522B	981-0522B	981-0623
HDKAK	A-H	981-0161	981-0200D	981-0514	981-0522B	981-0522B	981-0623
HDKAL	A	981-0148	981-0256C	981-0517	981-0523B	981-0523B	981-0612
HDKAL	B-D	981-0104	981-0256C	981-0517	981-0523B	981-0523B	981-0619B
HDKAL (Commercial)	A	981-0148	981-0256C	981-0517	981-0523B	981-0523B	981-0613
HDKAQ	A	981-0148	981-0256C	981-0517	981-0523B	981-0523B	981-0612
HDKAR	A	981-0148	981-0256C	981-0517	981-0523B	981-0523B	981-0612
HDKAS	A	981-0148	981-0256C	981-0517	981-0523B	981-0523B	981-0612
HDKAS	B-D	981-0104	981-0256C	981-0517	981-0523B	981-0523B	981-0619B
HDKAS (Commercial)	A	981-0148	981-0256C	981-0517	981-0523B	981-0523B	981-0613
HDKAT	A-E	981-0161	981-0200D	981-0514	981-0522B	981-0522B	981-0623
HDKBA	A	981-0166B	981-0271	981-0514	981-0535	981-0535	981-0633B
HDKBA	B-C	981-0166B	—	—	—	—	981-0633B
HDKBB	A-C	981-0167B	981-0273	981-0514	981-0535	981-0535	981-0634B
HGJAA	A-C	983-0101B	983-0201C	983-0501C	983-0501C	983-0501C	983-0600
HGJAB	A-C	983-0101B	983-0201C	983-0501C	983-0501C	983-0501C	983-0600
HGJAC	A-C	983-0101B	983-0201C	983-0501C	983-0501C	983-0501C	983-0600
HGJAD	A-B	983-0102	983-0202C	983-0501C	983-0501C	983-0501C	983-0601
HGJAE	A-B	983-0102	983-0202C	983-0501C	983-0501C	983-0501C	983-0601
HGJAF	A-B	983-0102	983-0202C	983-0501C	983-0501C	983-0501C	983-0601

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later



## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>J</b>							
JB	A-AD	967-0120	967-0223	967-0754	900-0184	900-0184	—
JB	E	967-0107	967-0223	967-0754	967-0507	967-0507	967-0107
JC	A-AB	967-0120	967-0220	967-0754	900-0184	900-0184	—
JCA	C	967-0107	967-0220	967-0754	967-0507	967-0507	967-0107
JCB	C	967-0107	967-0220	967-0754	967-0507	967-0507	967-0107
<b>KA</b>							
KA	A-H	—	—	NA	—	—	—
<b>KB</b>							
KB	A-M	957-0301	957-0301	NA	—	—	—
KB	N-S	—	—	NA	900-0150	900-0150	—
<b>KF</b>							
KF 0.6 kw	A	981-0127	981-0233	981-0507	981-0507	981-0507	NA
<b>KH</b>							
KH 0.4 kw	A	981-0122	981-0226	981-0504	981-0504	981-0504	NA
<b>KJ</b>							
KJ 1.0 kw	A	981-0127	981-0227	981-0504	981-0504	981-0504	NA
<b>KK</b>							
KK 1.4 kw	A	981-0123	981-0228	981-0504	981-0504	981-0504	NA
KK 1.4 kw	B	981-0128	981-0234	981-0504	981-0504	981-0504	NA
<b>KM</b>							
KM 2.1 kw	A	981-0123	981-0229	981-0504	981-0504	981-0504	NA
KM 2.2 kw	B	981-0128	981-0235	981-0508	981-0508	981-0508	NA
<b>KN</b>							
KN 3.0 kw	A	981-0123	981-0230	981-0504	981-0504	981-0504	NA
KN 3.2 kw	B	981-0128	981-0236	981-0509	981-0509	981-0509	NA
<b>KP</b>							
KP 3.5 kw	A	981-0123	981-0231	981-0504	981-0504	981-0504	NA
KP 3.5 kw	B	981-0128	981-0237	981-0509	981-0509	981-0509	NA
<b>KQ</b>							
KQ 5.0 kw	A	981-0126	981-0232	981-0505	981-0505	981-0505	NA
* - PCC Control Service Manual 960-0507      * - Refer to PCC Control Parts Manual 960-0205 for replacement parts. ** - Detector Control Service Manual 960-0504      # - Built in 1994 or later							

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>KR</b>							
KR	A-M	957-0301	958-0301	NA	—	—	—
KR	N-S	—	—	NA	900-0150	900-0150	—
KR	T	957-0120	—	NA	900-0150	900-0150	—
<b>KT</b>							
KT19	A-B	904-0130	904-0210	NA	NA	3810311 – Refer to Cummins	NA
KTA12	E-F	960-0139	960-0240	NA	960-0504	960-0504	960-0607
KTA19	A-B	904-0130	904-0210	NA	NA	3810311 – Refer to Cummins	NA
KTA31	E	960-0142	960-0263	NA	960-0504	960-0504	960-0609
KTA32	E	960-0142	960-0263	NA	960-0504	960-0504	960-0609
KTA33	E	960-0142	960-0263	NA	960-0504	960-0504	960-0609
KTA38	A-C	904-0133	904-0212	NA	NA	3810311 – Refer to Cummins	NA
KTA50	A-D	904-0134	904-0213	NA	NA	3810311 – Refer to Cummins	NA
KTA51	E-H	960-0140	960-0264	NA	960-0504	960-0504	960-0608
KTA52	E-H	960-0140	960-0264	NA	960-0504	960-0504	960-0608
KTA53	E-H	960-0140	960-0264	NA	960-0504	960-0504	960-0608
KTA54	E-H	960-0140	960-0264	NA	960-0504	960-0504	960-0608
KTT11	E-F	960-0139	960-0240	NA	960-0504	960-0504	960-0607
KTT12	E-F	960-0139	960-0240	NA	960-0504	960-0504	960-0607
KTT51	E	960-0140	960-0264	NA	960-0504	960-0504	960-0608
KTT52	E-H	960-0140	960-0264	NA	960-0504	960-0504	960-0608
KTTA19	A-B	904-0130	904-0210	NA	NA	3810311 – Refer to Cummins	NA
KTTA38	A-C	904-0133	904-0212	NA	NA	3810311 – Refer to Cummins	NA
KTTA50	A-D	904-0134	904-0213	NA	NA	3810311 – Refer to Cummins	NA

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>KV</b>							
KV	A-B	981-0129	981-0238F	981-0506	981-0506	981-0506	981-0626
KV	C-D	981-0136	981-0238F	981-0518D	981-0518D	981-0518D	981-0604
KV	E-K	981-0153C	981-0238F	981-0518D	981-0518D	981-0518D	981-0604
KVC	A-C	981-0158C	981-0238F	981-0518D	981-0518D	981-0518D	981-0620
KVD	A	981-0164	981-0238F	981-0518D	981-0518D	981-0518D	981-0631
<b>KY</b>							
KY	A	981-0139	981-0246B	981-0503	981-0503	981-0503	981-0627
KY	B-C	981-0139	981-0246B	981-0503	981-0503	981-0503	981-0607
KY	D-H	981-0154	981-0246B	981-0503	981-0503	981-0503	981-0607
KY	J	981-0159C	981-0246B	981-0530	981-0530	981-0530	981-0621
KY	K	981-0159C	—	981-0530	981-0530	981-0530	981-0621
KY Tracker	E-F	981-0155	981-0246B	981-0503	981-0503	981-0503	981-0611
KYD	A-B	981-0169	—	—	—	—	981-0636
<b>L</b>							
LDDA		944-0122	—	NA	900-0150	900-0150	—
Lddb		944-0122	—	NA	900-0150	900-0150	—
LDfE		956-0120	956-0220	NA	900-0150	900-0150	—
LDfM		960-0120	960-0220	NA	900-0181	900-0181	—
LDfN		960-0121	960-0221	NA	900-0181	900-0181	—
LDfP		960-0122	960-0222	NA	900-0181	900-0181	—
LDfS		960-0123	960-0223	NA	900-0181	900-0181	—
LDfW		960-0127	960-0228	NA	900-0192	900-0192	—
LDfX		—	960-0225	NA	900-0192	900-0192	—
LDfY		960-0129	960-0229	NA	900-0192	900-0192	—
LDfZ		—	960-0230	NA	900-0192	900-0192	—
LDYA		973-0120	973-0220	NA	900-0150	900-0150	—
LDYC		—	973-0222	NA	900-0150	900-0150	—
LDYD		973-0123	—	NA	900-0150	900-0150	—
LK	A-N	930-0121	930-0221	—	900-0196	900-0196	—
LK RV	A-L	930-0310	930-0220	—	900-0196	900-0196	—
LK RV	M	930-0120	930-0220	—	900-0196	900-0196	—
LRDJC	AA-AC	—	974-0221	—	—	—	—
LT 200/260	J	—	913-0203B	—	—	—	—

\* - PCC Control Service Manual 980-0507

\* - Refer to PCC Control Parts Manual 980-0205 for replacement parts.

\*\* - Detector Control Service Manual 980-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>M</b>							
MAJ		933-0120	933-0220	933-0501	933-0501	933-0501	—
MAJB	A-B	933-0121	933-0221	933-0502	933-0502	933-0502	933-0600
MCCK	A-G	—	927-0221	927-0752	900-0196	900-0196	—
MCCK	H-J	927-0121	927-0224	927-0752	900-0196	900-0196	—
MCE	A	927-0124	927-0225	927-0505	927-0505	927-0505	927-0600
MCGBA	A-C	960-0148	960-0200	NA	960-0506	960-0506	960-0613
MCGBA	D	960-0151B	960-0206B	NA	960-0508B	960-0508B	960-0616B
MCGCA	A-C	960-0148	960-0200	NA	960-0506	960-0506	960-0613
MCGCA	D	960-0151B	960-0206B	NA	960-0508B	960-0508B	960-0616B
MCGCB	A-C	960-0148	960-0200	NA	960-0506	960-0506	960-0613
MCGDA	A-C	960-0148	960-0200	NA	960-0506	960-0506	960-0613
MCGDA	D	960-0151B	960-0206B	NA	960-0508B	960-0508B	960-0616B
MCGDB	A-C	960-0148	960-0200	NA	960-0506	960-0506	960-0613
MCGDB	D	960-0151B	960-0206	NA	960-0508B	960-0508B	960-0616B
MCGGA	A-C	960-0148	960-0200	NA	960-0506	960-0506	960-0613
MCGGA	D	960-0151B	960-0206B	NA	960-0508B	960-0508B	960-0616B
MDBA	A	960-0147	960-0203	NA	—	—	—
MDCB	A	960-0147	960-0203	NA	—	—	—
MDEG	A-D	977-0305	977-0305	NA	900-0150	900-0150	—
MDEG	E-K	977-0309	977-0309	NA	900-0150	900-0150	—
MDEG	L	977-0309	977-0222	NA	900-0150	900-0150	—
MDEH	A	976-0305	976-0305	NA	900-0150	900-0150	—
MDEH	B-J	976-0121	976-0221	NA	900-0150	900-0150	—
MDEH	K	976-0121	976-0222	NA	900-0150	900-0150	—
MDGBA	A-C	960-0146	960-0200	NA	960-0506	960-0506	960-0612
MDGBA	A-C	960-0146	960-0200	NA	960-0506	960-0506	960-0612
MDGCA	A-C	960-0146	960-0200	NA	960-0506	960-0506	960-0612
MDGCB	A-C	960-0146	960-0200	NA	960-0506	960-0506	960-0612
MDGDA	A-C	960-0146	960-0200	NA	960-0506	960-0506	960-0612
MDGDA	D	960-0151B	960-0206B	NA	960-0508B	960-0508B	960-0616B
MDGDB	A-C	960-0146	960-0200	NA	960-0506	960-0506	960-0612
MDGDB	D	960-0151B	960-0206B	NA	960-0508B	960-0508B	960-0616B
MDGDC	A	960-0151B	960-0206B	—	960-0508B	960-0508B	960-0616B

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>M (Continued)</b>							
MDGDD	A	960-0151B	960-0206B	—	960-0508B	960-0508B	960-0616B
MDGGA	A-C	960-0146	960-0200	NA	960-0506	960-0506	960-0612
MDJA	A-V	—	—	974-0750	—	—	—
MDJB	A-U	968-0321	968-0321	974-0750	—	—	—
MDJC	AA-AD	968-0122	968-0222	974-0750	900-0184	900-0184	—
MDJE	A-AA	—	968-0220	968-0562	968-0562	968-0562	—
MDJE	AB-AF	968-0120	968-0224	974-0750	900-0184	900-0184	—
MDJF	A-AA	968-0121	968-0221	968-0562	900-0184	900-0184	—
MDJF	AA-AD	968-0121	968-0221	974-0750	900-0184	900-0184	—
MDKAA	A-B	981-0103B	981-0260B	981-0528	981-0524C	981-0524C	981-0616B
MDKAB	A-B	981-0103B	981-0260B	981-0528	981-0524C	981-0524C	981-0616B
MDKAD	A-B	981-0140	981-0264B	981-0521	981-0520B	981-0520B	981-0608
MDKAD	C	981-0156	981-0264B	981-0521	981-0520B	981-0520B	981-0617
MDKAE	A-B	981-0140	981-0264B	981-0521	981-0520B	981-0520B	981-0608
MDKAE	C	981-0156	981-0264B	981-0521	981-0520B	981-0520B	981-0617
MDKAF	A-B	981-0140	981-0265B	981-0521	981-0520B	981-0520B	981-0608
MDKAF	C	981-0156	981-0265B	981-0521	981-0520B	981-0520B	981-0617
MDKAL	A	981-0102	981-0261C	981-0528	981-0524B	981-0524B	981-0616
MDKAL	B-C	981-0103B	981-0261C	981-0528	981-0524C	981-0524C	981-0616B
MDKAU	A	981-0162	981-0267	981-0533	981-0532	981-0532	981-0629
MDKAV	A	981-0163B	981-0268B	981-0528	981-0534B	981-0534B	981-0630B
MDKAW	A	981-0163B	981-0268B	981-0528	981-0534B	981-0534B	981-0630B
MDKAZ	A	981-0163B	981-0268B	981-0528	981-0534B	981-0534B	981-0630B
MDKBC	A	981-0168	—	—	—	—	—
MDKBD	A	981-0168	981-0270B	981-0521	981-0534B	981-0534B	981-0630B
MDKBE	A	981-0163B	981-0270B	981-0521	981-0534B	981-0534B	981-0630B
MDKBF	A	981-0163B	981-0270B	981-0521	981-0534B	981-0534B	981-0630B
MDKBG	A	981-0163B	981-0272	981-0528	981-0534B	981-0534B	981-0630B
MDKC	A-C	981-0120	981-0220	981-0501	981-0502	981-0502	981-0600
MDKD	A-D	981-0120	981-0222	981-0501	981-0502	981-0502	981-0600
MDKUB	A-C	981-0134	981-0262C	981-0514	981-0512	981-0512	981-0602
MDKUB	D-F	981-0151B	981-0262C	981-0514	981-0512	981-0512	981-0602B
MDKWB	A-C	981-0134	981-0262C	981-0514	981-0512	981-0512	981-0602

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>M (Continued)</b>							
MDKWB	D-F	981-0151B	981-0262C	981-0514	981-0512	981-0512	981-0602B
MDL3	A	934-0124	934-0229	—	934-0500	934-0500	934-0602
MDL4	A	934-0124	934-0229	—	934-0500	934-0500	934-0602
MDL6	A	934-0124	934-0229	—	934-0500	934-0500	934-0602
MDTA	A-B	961-0122	961-0222	—	900-0184	900-0184	—
MGKBC	A-B	981-0168	981-0274	981-0538	981-0537	981-0537	981-0635
MGKBD	A-B	981-0168	981-0274	981-0538	981-0537	981-0537	981-0635
MJC	A-AC	968-0340	968-0340	967-0757	900-0184	900-0184	—
MKY	H	981-0157	981-0266	981-0529	981-0529	981-0529	981-0618
MKY	J	981-0160C	981-0266B	981-0531	981-0531	981-0531	981-0622
MME	A-C	918-0100	918-0200	918-0500	918-0500	918-0500	918-0100
<b>N</b>							
N855	A-D	904-0129	904-0209	—	3810311 - Refer to Cummins	3810311 - Refer to Cummins	—
NH	A-R	940-0120	940-0223	940-0751	900-0196	900-0196	—
NH AUX	P	940-0124	940-0224	940-0751	900-0196	900-0196	900-0322
NH Mob Refr/Util	P	940-0120	940-0226	940-0751	900-0196	900-0196	—
NH Power Drawer	A	—	—	940-0751	900-0196	900-0196	—
NH PwrDrawr 9000	A-H	—	—	—	—	—	—
NH RV	A-H	940-0121	940-0221	940-0501	940-0501	940-0501	—
NH RV	J-R	940-0121	940-0222	900-0337	900-0337	900-0337	940-0610
NH Standby	F	940-0360	940-0360	940-0751	900-0196	900-0196	—
NHD	A-G	965-0129	940-0229	965-0529	965-0529	965-0529	965-0629
NHD	H	965-0129	940-0229	965-0500	965-0500	965-0500	965-0629
NHD	J-K	965-0135	940-0229	965-0500	965-0500	965-0500	965-0632
NHD	L-M	965-0175	940-0229	965-0500	965-0500	965-0500	965-0632
NHE	A-C	940-0122	940-0228B	940-0502	940-0502	940-0502	940-0622
NHE	D-L	965-0128	940-0228B	965-0528	965-0528	965-0528	965-0628
NHE	M-P	965-0176	940-0228B	965-0528	965-0528	965-0528	965-0628
NHE Tracker	M-N	965-0177	940-0228B	965-0528	965-0528	965-0528	965-0628
NHEL	A-C	940-0122	940-0228B	940-0502	940-0502	940-0502	940-0622

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

## Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>N (Continued)</b>							
NHEL	D-P	965-0128	940-0228B	965-0528	965-0528	965-0528	965-0628
NHL	P	940-0125	940-0225	—	900-0196	900-0196	940-0625
NHM	A-E	965-0131	940-0230	965-0531	965-0531	965-0531	965-0631
NHM	F	965-0136	940-0230	965-0531	965-0531	965-0531	965-0631
NHM	G-H	965-0138	940-0230	965-0531B	965-0531B	965-0531B	965-0633
NT4	E-F	960-0138	960-0204	NA	960-0504	960-0504	960-0606
NT5	E-F	960-0138	960-0204	NA	960-0504	960-0504	960-0606
NT6	E-F	960-0138	960-0204	NA	960-0504	960-0504	960-0606
NT855	A-D	904-0129	904-0209	NA	3810311 – Refer to Cummins	3810311 – Refer to Cummins	NA
NTA2	E-F	960-0138	960-0204	NA	960-0504	960-0504	960-0606
NTA3	E-F	960-0138	960-0204	NA	960-0504	960-0504	960-0606
NTA855	A-D	904-0129	904-0209	NA	3810311 – Refer to Cummins	3810311 – Refer to Cummins	NA
NTTA855	A-D	904-0129	904-0209	NA	NA	NA	NA
<b>P</b>							
P Series	H	—	—	—	900-0193	900-0193	—
P Series	J	919-0120	—	—	900-0193	900-0193	—
P Series 50Hz	H	—	—	—	900-0193	900-0193	—
P Series 60Hz	H	—	—	—	900-0193	900-0193	—
P Series Standby		—	—	—	900-0193	900-0193	—
PCC		—	960-0205	—	—	—	—
<b>Q</b>							
QSA	A-B	934-0123	934-0257	NA	934-0502	934-0502	NA
QSDA	B-C	960-0150	960-0261B	NA	960-0505	960-0505	NA
QSDB	B-C	960-0150	960-0261B	NA	960-0505	960-0505	NA
QSEA	B-C	960-0150	960-0261B	NA	960-0505	960-0505	NA
QSFA	B-C	960-0150	960-0261B	NA	960-0505	960-0505	NA
QSG	A-E	960-0141	960-0257	NA	960-0505	960-0505	NA
QSGBA 5400	A-H	960-0141	960-0257	NA	—	—	NA
QSGCA 5400	A-H	960-0141	960-0257	NA	—	—	NA
QSGCB 5400	A-H	960-0141	960-0257	NA	—	—	NA

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later

# Gensets

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual Engine	Service Manual Control	Service Manual Generator	Installation Manual
<b>R</b>							
RBAA (20-25 kW)	A	—	943-0203	NA	—	—	—
RBAA (6-15 kW)	A-C	943-0101E	943-0202C	NA	943-0501E	943-0501E	943-0101E
RDJC	A-AD	974-0122	974-0221	974-0753	900-0184	900-0184	—
RDJC	E#	974-0127	974-0221	974-0753	974-0503	974-0503	974-0127
RDJF	A-AD	974-0122	974-0222	974-0753	900-0184	900-0184	—
RJC	A-AC	974-0120	974-0220	967-0757	900-0184	900-0184	—
<b>S</b>							
SJB	A-C	946-0121	946-0221	—	943-0019	943-0016	946-0621
SK	A	946-0120	946-0220	—	900-0184	900-0328	—
SK Mobile	A	—	946-0223	—	—	—	—
SKB	A	946-0122	946-0222	—	943-0019	943-0016	—
<b>T</b>							
TGHAA	A-C	965-0101B	965-0206	965-0501B	965-0501B	965-0501B	965-0600B
<b>V</b>							
VT28	A-B	904-0131	904-0211	NA	NA	3810311 - Refer to Cummins	NA
VTA28	A-B	904-0131	904-0211	NA	NA	3810311 - Refer to Cummins	NA
<b>W</b>							
WA	A-E	—	—	—	900-0150	900-0150	—
WA	F-L	947-0302	947-0220	—	900-0150	900-0150	—
WB	A-G	—	—	—	900-0150	900-0150	—
WB	H-L	948-0305	948-0305	—	900-0150	900-0150	—
WC	A	—	—	—	—	—	—
WE	A	—	—	—	—	—	—
WF	A-C	—	—	—	—	—	—
WK	A-B	—	—	—	—	—	—

\* - PCC Control Service Manual 960-0507

\* - Refer to PCC Control Parts Manual 960-0205 for replacement parts.

\*\* - Detector Control Service Manual 960-0504

# - Built in 1994 or later



## Switchgear

Model / Series	Application	Spec Letter	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>AT</b>						
AT 30-400 Amp	—	—	962-0100	NA	962-0500	NA
AT 800-1750 Amp	—	—	962-0101	NA	962-0502	NA
<b>BT</b>						
BT	Util-Set	A	962-0108	—	962-0511	NA
BT	Util-Util	A	962-0111	—	962-0511	NA
BT	Util-Set	B	962-0121	—	—	—
BT 1200-3000 Amp	Util-Set	A	962-0123	962-0226	962-0515	962-0609
BT 1200-3000 Amp	Util-Util	A	962-0124	962-0226	962-0515	962-0610
BTPCB 150/225/260 Amp	All	A	962-0128A	962-0232	962-0518A	962-0614A
BTPCC 300/400 Amp	All	A	962-0128A	962-0233	962-0518A	962-0614A
BTPCD 600/800/1000 Amp	All	A	962-0128A	962-0234	962-0518A	962-0614A
BTPCE 1200 Amp	All	A	962-0128A	962-0235	962-0519A	962-0614A
BTPCF 1600 Amp	All	A	962-0128A	962-0235	962-0519A	962-0614A
BTPCG 2000 Amp	All	A	962-0128A	962-0235	962-0519A	962-0614A
BTPCH 3000 Amp	All	A	962-0128A	962-0235	962-0519A	962-0614A
BT/BN 150-225-260	Util-Set	B	962-0121	962-0222	962-0514	962-0607
BT/BN 150-225-260	Util-Util	B	962-0122	962-0222	962-0514	962-0608
BT/BN 150-225-260	Util-Set	C	962-0121	962-0222	962-0514	962-0607
BT/BN 300-400 Amp	Util-Set	B	962-0121	962-0223	962-0514	962-0607
BT/BN 300-400 Amp	Util-Util	B	962-0122	962-0223	962-0514	962-0608
BT/BN 600-800-1000 Amp	Util-Set	B	962-0121	962-0224	962-0514	962-0607
BT/BN 600-800-1000 Amp	Util-Util	B	962-0122	962-0224	962-0514	962-0608
BT/BN 600-800-1000 Amp	Util-Set	C	962-0121	962-0224	962-0514	962-0607
<b>CE</b>						
CECU 40-4000 Amp	Amp	A	962-0114	NA	NA	NA
<b>CH</b>						
CHPC 125-260 Amp	All	A	962-0130B	962-0238	962-0520	962-0616B
CHPC 300-600 Amp	All	A	962-0130B	962-0239	962-0520	962-0616B
CHPC 800 Amp	All	A	962-0130B	—	—	962-0616B

## Switchgear

Model / Series	Application	Spec Letter	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>CT</b>						
CT/CN 150-225-260	Util-Set	G-K	962-0113	962-0219B	962-0512	962-0600
CT/CN 1200-3000 (Zenith)	Non-Auto	G-J	962-0120	962-0225	962-0513	962-0606
CT/CN 1200-3000 (Zenith)	Set-Set	G-J	962-0125	962-0225	962-0513	962-0511
CT/CN 1200-3000 (Zenith)	Util-Set	G-J	962-0118	962-0225	962-0513	962-0604
CT/CN 1200-3000 (Zenith)	Util-Util	G-J	962-0119	962-0225	962-0513	962-0605
CT/CN 150-225-260	Non-Auto	G-K	962-0117	962-0219B	962-0512	962-0603
CT/CN 150-225-260	Set-Set	G-K	962-0116	962-0219B	962-0512	962-0602
CT/CN 150-225-260	Util-Util	G-K	962-0115	962-0219B	962-0512	962-0601
CT/CN 300-400-600	Non-Auto	G-K	962-0117	962-0220B	962-0512	962-0603
CT/CN 300-400-600	Set-Set	G-K	962-0116	962-0220B	962-0512	962-0602
CT/CN 300-400-600	Util-Set	G-K	962-0113	962-0220B	962-0512	962-0600
CT/CN 300-400-600	Util-Util	G-K	962-0115	962-0220B	962-0512	962-0601
CT/CN 40-70-125	Non-Auto	G-K	962-0117	962-0218B	962-0512	962-0603
CT/CN 40-70-125	Set-Set	G-K	962-0116	962-0218B	962-0512	962-0602
CT/CN 40-70-125	Util-Set	G-K	962-0113	962-0218B	962-0512	962-0600
CT/CN 40-70-125	Util-Util	G-K	962-0115	962-0218B	962-0512	962-0601
CT/CN 800-1000	Non-Auto	G-K	962-0117	962-0221B	962-0512	962-0603
CT/CN 800-1000	Set-Set	G-K	962-0116	962-0221B	962-0512	962-0602
CT/CN 800-1000	Util-Set	G-K	962-0113	962-0221B	962-0512	962-0600
CT/CN 800-1000	Util-Util	G-K	962-0115	962-0221B	962-0512	962-0601
<b>LC</b>						
LC 350, 500 Amp	Util-Set	A	913-0103	913-0205	913-0504	913-0601
LC 80,125,250,275 Amp	Util-Set	A	913-0103	913-0204	913-0504	913-0601
<b>LT</b>						
LT	———	A-E	———	900-0044	913-0500	———
LT 200-260	Util-Set	J	913-0102	913-0203B	913-0503	913-0600B
LT 30-60	———	F	913-0100	913-0200	913-0501	———
LT 30-60-100-150	Util-Set	J	913-0102	913-0202B	913-0503	913-0600B
LT 30-60-100-200	———	G-H	913-0101	913-0201	913-0502	913-0101
<b>OH</b>						
OHPC 300-600 Amp	All	A	962-0130B	962-0237	962-0520	962-0616B
OHPC 40-260 Amp	All	A	962-0130B	962-0236	962-0520	962-0616B
OHPC 800 Amp	All	A	962-0130B	———	———	962-0616B

## Switchgear

Model / Series	Application	Spec Letter	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>OT</b>						
OT 100 Amp	Non-Auto	A-D	962-0103	962-0202	962-0503	NA
OT 100 Amp	Set-Set	A-D	962-0105	962-0202	962-0503	NA
OT 100 Amp	Util-Set	A-D	962-0102	962-0202	962-0503	NA
OT 100 Amp	Util-Util	A-D	962-0104	962-0202	962-0503	NA
OT 1000 Amp	Non-Auto	A-D	962-0103	962-0209	962-0503	NA
OT 1000 Amp	Set-Set	A-D	962-0105	962-0209	962-0503	NA
OT 1000 Amp	Util-Set	A-D	962-0102	962-0209	962-0503	NA
OT 1000 Amp	Util-Util	A-D	962-0104	962-0209	962-0503	NA
OT 150 Amp	Non-Auto	A-D	962-0103	962-0203	962-0503	NA
OT 150 Amp	Set-Set	A-D	962-0105	962-0203	962-0503	NA
OT 150 Amp	Util-Set	A-D	962-0102	962-0203	962-0503	NA
OT 150 Amp	Util-Util	A-D	962-0104	962-0203	962-0503	NA
OT 2 150-225-260	Non-Auto	E	962-0112	962-0211	962-0504	NA
OT 2 150-225-260	Set-Set	E	962-0110	962-0211	962-0504	NA
OT 2 150-225-260	Util-Set	E	962-0107	962-0211	962-0504	NA
OT 2 150-225-260	Util-Util	E	962-0109	962-0211	962-0504	NA
OT 2 300-400-600	Non-Auto	E	962-0112	962-0223	962-0504	NA
OT 2 300-400-600	Set-Set	E	962-0110	962-0223	962-0504	NA
OT 2 300-400-600	Util-Set	E	962-0107	962-0223	962-0504	NA
OT 2 300-400-600	Util-Util	E	962-0109	962-0223	962-0504	NA
OT 2 40-70-100	Non-Auto	E	962-0112	962-0210	962-0504	NA
OT 2 40-70-100	Set-Set	E	962-0110	962-0210	962-0504	NA
OT 2 40-70-100	Util-Set	E	962-0107	962-0210	962-0504	NA
OT 2 40-70-100	Util-Util	E	962-0109	962-0210	962-0504	NA
OT 2 400-600	Non-Auto	F	962-0112	962-0212	962-0504	NA
OT 2 400-600	Set-Set	F	962-0110	962-0212	962-0504	NA
OT 2 400-600	Std Auto	F	962-0107	962-0212	962-0504	NA
OT 2 400-600	Util-Util	F	962-0109	962-0212	962-0504	NA
OT 2 800-1000	Non-Auto	E	962-0112	962-0214	962-0504	NA
OT 2 800-1000	Set-Set	E	962-0110	962-0214	962-0504	NA
OT 2 800-1000	Util-Set	E	962-0107	962-0214	962-0504	NA
OT 2 800-1000	Util-Util	E	962-0109	962-0214	962-0504	NA
OT 225 Amp	Non-Auto	A-D	962-0103	962-0204	962-0503	NA
OT 225 Amp	Set-Set	A-D	962-0105	962-0204	962-0503	NA
OT 225 Amp	Util-Set	A-D	962-0102	962-0204	962-0503	NA
OT 225 Amp	Util-Util	A-D	962-0104	962-0204	962-0503	NA

## Switchgear

Model / Series	Application	Spec Letter	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>OT (Continued)</b>						
OT 280 Amp	Non-Auto	A-D	962-0103	962-0205	962-0503	NA
OT 280 Amp	Set-Set	A-D	962-0105	962-0205	962-0503	NA
OT 280 Amp	Util-Set	A-D	962-0102	962-0205	962-0503	NA
OT 280 Amp	Util-Util	A-D	962-0104	962-0205	962-0503	NA
OT 400 Amp	Non-Auto	A-D	962-0103	962-0206	962-0503	NA
OT 400 Amp	Set-Set	A-D	962-0105	962-0206	962-0503	NA
OT 400 Amp	Util-Set	A-D	962-0102	962-0206	962-0503	NA
OT 400 Amp	Util-Util	A-D	962-0104	962-0206	962-0503	NA
OT 600 Amp	Non-Auto	A-D	962-0103	962-0207	962-0503	NA
OT 600 Amp	Set-Set	A-D	962-0105	962-0207	962-0503	NA
OT 600 Amp	Util-Set	A-D	962-0102	962-0207	962-0503	NA
OT 600 Amp	Util-Util	A-D	962-0104	962-0207	962-0503	NA
OT 800 Amp	Non-Auto	A-D	962-0103	962-0208	962-0503	NA
OT 800 Amp	Set-Set	A-D	962-0105	962-0208	962-0503	NA
OT 800 Amp	Util-Set	A-D	962-0102	962-0208	962-0503	NA
OT 800 Amp	Util-Util	A-D	962-0104	962-0208	962-0503	NA
OTBCA 40-4000 Amp	—	A	962-0114	NA	NA	NA
OTJCA 40-4000 Amp	—	A	962-0114	NA	NA	NA
OTPCA 40 70, 125 Amp	All	A	962-0126A	962-0227	962-0516A	962-0612A
OTPCB 150, 225, 260 Amp	All	A	962-0126A	962-0228B	962-0516A	962-0612A
OTPC 300, 400, 600 Amp	All	A	962-0126A	962-0229	962-0516A	962-0612A
OTPCD 800-1000 Amp	All	A	962-0126A	962-0230B	962-0516A	962-0612A
OTPCE 1200 Amp	All	A	962-0126A	962-0231	962-0517A	962-0612A
OTPCF 1600 Amp	All	A	962-0126A	962-0231	962-0517A	962-0612A
OTPCG 2000 Amp	All	A	962-0126A	962-0231	962-0517A	962-0612A
OTPCH 3000 Amp	All	A	962-0126A	962-0231	962-0517A	962-0612A
OT/ON 1200-3000	Non-Auto	G-J	962-0120	962-0225	962-0513	962-0606
OT/ON 1200-3000	Util-Set	G-J	962-0118	962-0225	962-0513	962-0604
OT/ON 1200-3000	Util-Util	G-J	962-0119	962-0225	962-0513	962-0605
OT/ON 1200-3000	Set-Set	G-J	962-0125	962-0225	962-0513	962-0611
OT/ON 150-225-260	Non-Auto	G-K	962-0117	962-0219B	962-0512	962-0603

## Switchgear

Model / Series	Application	Spec Letter	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>OT (Continued)</b>						
OT/ON 150-225-260	Set-Set	G-K	962-0116	962-0219B	962-0512	962-0602
OT/ON 150-225-260	Util-Set	G-K	962-0113	962-0219B	962-0512	962-0600
OT/ON 150-225-260	Util-Util	G-K	962-0115	962-0219B	962-0512	962-0601
OT/ON 300-400-600	Non-Auto	G-K	962-0117	962-0220B	962-0512	962-0603
OT/ON 300-400-600	Set-Set	G-K	962-0116	962-0220B	962-0512	962-0602
OT/ON 300-400-600	Util-Set	G-K	962-0113	962-0220B	962-0512	962-0600
OT/ON 300-400-600	Util-Util	G-K	962-0115	962-0220B	962-0512	962-0601
OT/ON 40-70-125	Non-Auto	G-K	962-0117	962-0218B	962-0512	962-0603
OT/ON 40-70-125	Set-Set	G-K	962-0116	962-0218B	962-0512	962-0602
OT/ON 40-70-125	Util-Set	G-K	962-0113	962-0218B	962-0512	962-0600
OT/ON 40-70-125	Util-Util	G-K	962-0115	962-0218B	962-0512	962-0601
OT/ON 800-1000	Non-Auto	G-K	962-0117	962-0221B	962-0512	962-0603
OT/ON 800-1000	Set-Set	G-K	962-0116	962-0221B	962-0512	962-0602
OT/ON 800-1000	Util-Set	G-K	962-0113	962-0221B	962-0512	962-0600
OT/ON 800-1000	Util-Util	G-K	962-0115	962-0221B	962-0512	962-0601
<b>RST</b>						
RST 200 Amp	Util-Gen	A	913-0104	913-0207	913-0505	913-0602
RST 60, 100 Amp	Util-Gen	A	913-0104	913-0206	913-0505	913-0602

### Separate Generators

Model / Series	Spec Letter	Operator Manual	Parts Manual	Service Manual	Installation Manual
UB DC Direct Service	A-B	914-0033	914-0033	914-0033	914-0033
UD	A-B	—	—	—	—
UD	C-D	937-0005	937-0005	—	—
UF	A-E	—	—	—	—
UF-AC 3600 RPM, 10UF/12UF-3,4,53N	A	—	—	—	—
UF-Battery Charging, 32-110 Volt	A-B	943-0003	943-0003	—	—
UF-Battery Charging, 32 Volt	B	943-0004	943-0004	—	—
UF-DC Direct Service	A-B	—	—	—	—
UF-DC Direct Service, 2UF/5UF-125: 10UF-150	A-B	943-0005	943-0005	—	—
UF PTO	A-B	—	—	—	—
UR	A-F	—	971-0200	900-0150	—
UR PTO	A	971-0007	971-0007	900-0150	—
UV	A	—	971-0210	900-0192	—
YB	A	—	971-0220	900-0181	—
YCB	A-G	919-0304	919-0304	900-0193	—
YCB	H	919-0308	919-0308	900-0193	—
YD PTO	AA	929-0101	929-0002	900-0184	—
YD PTO PROTEC	A	929-0100	929-0201B	900-0184	929-0600
YD PTO PROTEC	B	929-0100	929-0201B	900-0184	929-0600
YD PTO PROTEC	C	929-0101	929-0201B	900-0184	929-0601B
YD Single Bearing	AA	—	929-0200	900-0184	—
YD Two Bearing AC	AA	929-0004	929-0004	900-0184	—
YHB	A	—	971-0230	900-0339	—
YKH	A	943-0100	943-0200	943-0500	—

## Special Products

Model / Series	Application	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>Annunciators</b>					
300-0749 12 VDC	Positive Signal	900-0199	900-0199	NA	900-0199
300-0750 24 VDC	Positive Signal	900-0199	900-0199	NA	900-0199
300-1295 24 VDC	Ground Signal	900-0209	NA	NA	900-0209
300-1591 12 VDC	Ground Signal	900-0209	NA	NA	900-0209
300-1749 24 VDC w/ Key	Ground Signal	900-0209	NA	NA	900-0209
300-1846 12 VDC	Positive Signal	900-0228	NA	NA	900-0228
300-1847 24 VDC	Positive Signal	900-0228	NA	NA	900-0228
300-2751 ANN 12/24 VDC	Negative Signal	900-0239	NA	NA	900-0239
300-2752 ANP 12/24 VDC	Positive Signal	900-0239	NA	NA	900-0239
300-4510-02 Net Mod. 12/24 VDC	Negative Signal	900-0282	900-0282	NA	900-0282
300-4510 ANN 12/24 VDC	Negative Signal	900-0278	900-0278	NA	900-0278
300-4511 ANP 12/24 VDC	Positive Signal	900-0278	900-0278	NA	900-0278
EPS ANN 24 VDC	Negative Signal	900-0170	900-0170	NA	900-0170
FT-10 Network Lonworks	PowerCommand	900-0293	900-0293	NA	900-0293
Lonworks 300-5318	PowerCommand	900-0289B	900-0289B	NA	900-0289B
<b>Annunciator, Remote Alarm</b>					
ANN, ANP Annunciator	—	900-0278	—	—	—
<b>Area Protection Monitor</b>					
	—	900-0201	NA	NA	900-0201
<b>Battery Chargers</b>					
305-0346 24 VDC	120/208/240 60 Hz Input	900-0100	900-0100	NA	NA
305-0347 12 VDC	120/208/240 60 Hz Input	900-0100	900-0100	NA	NA
305-0395 12 VDC	480 60 Hz Input	900-0100	900-0100	NA	NA
305-0398 24 VDC	480 60 Hz Input	900-0100	900-0100	NA	NA
305-0513 12 VDC SCR 2 Amp	120 50/60 Hz Input	900-0174	900-0174	NA	NA
305-0706 24 VDC	120/208/240 50 Hz Input	900-0100	900-0100	NA	NA
305-0707 12 VDC	120/208/240 50 Hz Input	900-0100	900-0100	NA	NA
305-0708 12 VDC	480 50 Hz Input	900-0100	900-0100	NA	NA

## Special Products

Model / Series	Application	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>Battery Chargers (Continued)</b>					
305-0709 24 VDC	480 50 Hz Input	900-0100	900-0100	NA	NA
305-0812 12 VDC	—	901-0102	NA	901-0602	901-0602
305-0813 24 VDC	—	901-0102	NA	901-0602	901-0602
305-0814 12 VDC	—	901-0102	NA	901-0602	901-0602
305-0815 24 VDC	—	901-0102	NA	901-0602	901-0602
305-0856	—	901-0103	NA	—	901-0604
<b>Coach Command</b>					
CCRV	—	900-0527B	900-0290	NA	900-0528B
CCRVB	—	900-0530	900-0295	NA	—
<b>Controls</b>					
HA Series 2 Wire Auto Load	Spec A-D	—	—	907-0500	—
HA Series 3 Wire Auto Load	Spec D	—	—	907-0501	—
MCCK Control-O-Matic	Spec C-F	—	—	927-0506	—
<b>Load Test Panel (5 kW)</b>					
	—	913-0006	913-0006	NA	NA
<b>Power Command</b>					
Control	—	NA	960-0205B	NA	NA
Digital Paralleling DF Series G	—	900-0519C	NA	900-0519C	NA
Digital Paralleling DFHA, DFHB,	—	900-0520C	NA	900-0520C	NA
Digital Paralleling DG Series G	—	900-0524B	NA	900-0524B	NA
Digital Paralleling DQAA/DQAB	—	900-0519C	NA	900-0519C	NA
Digital Paralleling DQBA/DQBB	—	900-0519C	NA	900-0519C	NA
FT-10 Network	—	900-0529	NA	NA	900-0529
Serial Communications Kit	—	NA	NA	NA	900-0522
Serial Configuration Tool	—	900-0523	NA	NA	900-0523
TP/XF-78 Network	—	900-0366	NA	NA	900-0366
<b>RV Inverter-Charger</b>					
HJBAA	Spec A-B	901-0606	901-0200	—	901-0606



## Special Products

Model / Series	Application	Operator Manual	Parts Manual	Service Manual	Installation Manual
<b>Switchgear</b>					
ERS (Elevator Control)	—	900-0227	NA	NA	NA
OT Accessories	Spec E-F	NA	962-0216	NA	NA